



YS868i

## 2D Barcode Scanner User's Manual



V5.1

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

Note: The setting code is a functional bar code, please do not scan it when it is not necessary, please scan the bar code on the product.

### ▼ Factory Default Setting



Factory Default Setting

Note: Factory default settings are marked with an asterisk "\*" in this manual.

### Interface

#### ▼ USB

Connect the computer, scan the "USB Keyboard" barcode, barcode scanner is USB Keyboard model, if you want to set USB-COM, should install the USB-COM driver, and set baud rate: 115200, data bit:8, Parity: None, stop bit: 1.



\* USB Keyboard



USB COM

#### ▼ USB HID



USB HID

### ▼ RS232

Connect RS232 interface, scan the "RS232" bar code, the serial port related setting is: baud rate :115200, data bit:8, Parity: None, stop bit: 1.



RS232

### ▼ All codes



All 1D code on



All 1D code off



All 2D code on



All 2D code off

### ▼ QR URL code setting



\* URL Off



URL On

### ▼ Decode Beeper



Low



Medium



\* High



Off

### ▼ Safe mode



\* Setting code function Off



Setting code function On

### ▼ Chinese output format



GBK (output in Notepad, EXCEL, WPS)



UNICODE (output in word)

### ▼ Same code delay time



100ms



\* 350ms

### ▼ Terminal setting



\* Enable CR



Disable CR



Enable CR+LF



Disable CR+LF

### ▼ Keyboard layout



\* USA



SPAIN



FRANCE



GERMANY



ITALY



CZECH



RUSSIA



CROATIA



TUYKEY Q

### Serial port setting

#### ▼ Baud rate



2400



4800



9600



19200



38400



57600



\* 115200