


UHF reader factory settings (WG26/11)

1.Output Mode changed to WG26 (RFID Reader SR3308,SR681, SR691, SR791, SA810 series,etc.)


2.Byte Offset set to 11byte

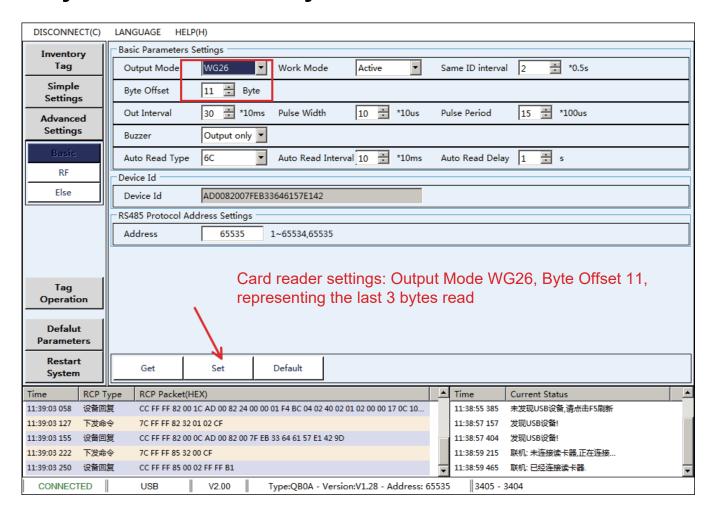





3.Card issuer (DM02 DR201, etc.) Data output format selects the last 3 nodes of decimal (Opp controller)

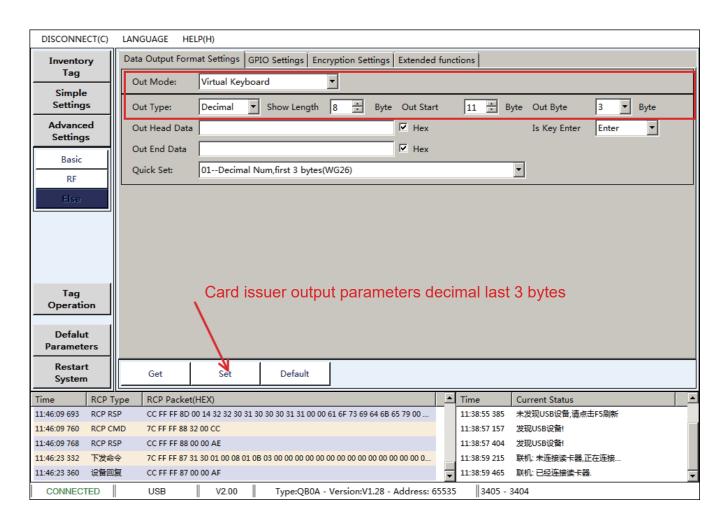







4.If the signal cannot be sent to the access controller and the door cannot be opened when connected to WG26.Please try the following two methods:

Method 1: Directly take the power from the controller, just connect four wires, power supply 12V+GND+D0+D1

Method 2: The card reader is powered separately, and the GND needs to be connected to the GND next to the controller D0 D1





5.If you have any questions, please restart the factory settings before restarting use

